Oster®

MODEL/
मॉडल

GCSTBS5802, GCSTBS5803, GCSTBS5813, GCSTBS5804, GCSTBS5805, GCSTBS5806 & GCSTBS5807

INSTRUCTION MANUAL

STEAM IRON

READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE

निर्देश मैनुअल

स्टीम आयरन

इस उपकरण का उपयोग करने से पहले सभी निर्देशो को ध्यान से पढ़े.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety instructions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING THE STEAM IRON.

1. The Iron should always be turned to the “OFF” position before plugging or unplugging from outlet. Never yank Cord to disconnect from outlet; grasp Plug and pull to disconnect.
2. Before connecting the Steam Iron, make sure the voltage in your outlet is the same as the voltage indicated on the appliance’s rating label. Use it with wall receptacle only.
3. To protect against risk of electrical shock, do not immerse the Power Cord, plug or the Steam Iron in water or other liquid.
4. Never use the Steam Iron if you have wet hands.
5. This appliance should not be used by children.
6. Never leave the Steam Iron unattended while it is turned on and connected to the supply mains (wall socket) or is on top of the ironing board.
7. Unplug from outlet while not in use.
8. Let Steam Iron completely cool off in the upright position before storing it. Wind the Power Cord around the Heel Rest before storing.
9. Burns may occur by touching hot parts, the hot water or the steam. Be careful if you have to turn the Steam Iron upside down, since there still may be hot water in the Reservoir.
10. Do not operate Iron with a damaged cord or if the Iron has been dropped if there are visible signs of damage, or iron is leaking. To avoid the risk of electric shock, do not disassemble the Iron. Take it to an Authorized Oster™ Service Center for examination and repair. Incorrect reassembly can cause a risk of electric shock when the Iron is used.
11. Do not use it outdoors.
12. Do not let the Power Cord come in contact with hot surfaces.
13. This Steam Iron is intended for household use only.
14. Use the Steam Iron only for the purpose intended.
15. Do not leave Steam Iron unattended while using it. Be careful; if you leave the Steam Iron unattended, always turn it off, disconnect the unit from the electric outlet and set the Iron in an upright position.
16. Repairs to the appliance may only be carried out by trained personnel. As a result of incorrect repairs considerable dangers for the user may result. Please contact an Authorized Oster™ Service Center in the event of repairs being necessary.
17. Always Turn OFF and disconnect the Steam Iron from the wall socket and allow to cool before filling it with water or emptying it out and before cleaning.
18. Avoid overfilling the Reservoir. Never fill it above the maximum water level.
19. In order to avoid overloading the circuits, never use another appliance with high wattage on the same circuit.

20. Iron must be used and rested on a stable surface.
21. If an extension cord is absolutely necessary, a cord with the same amperage or higher than that of your iron should be used. Cords rated for less amperage may overheat. Care should be taken to arrange the cord so that it cannot be pulled or tripped over.
22. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
23. Close supervision is necessary when any appliance is used by or near children, or incapacitated individuals.

SAVE THESE INSTRUCTIONS

The manufacturer is not liable for any damages, which are caused by using the appliance incorrectly or for any other purpose than that intended.

DESCRIPTION OF THE APPLIANCE

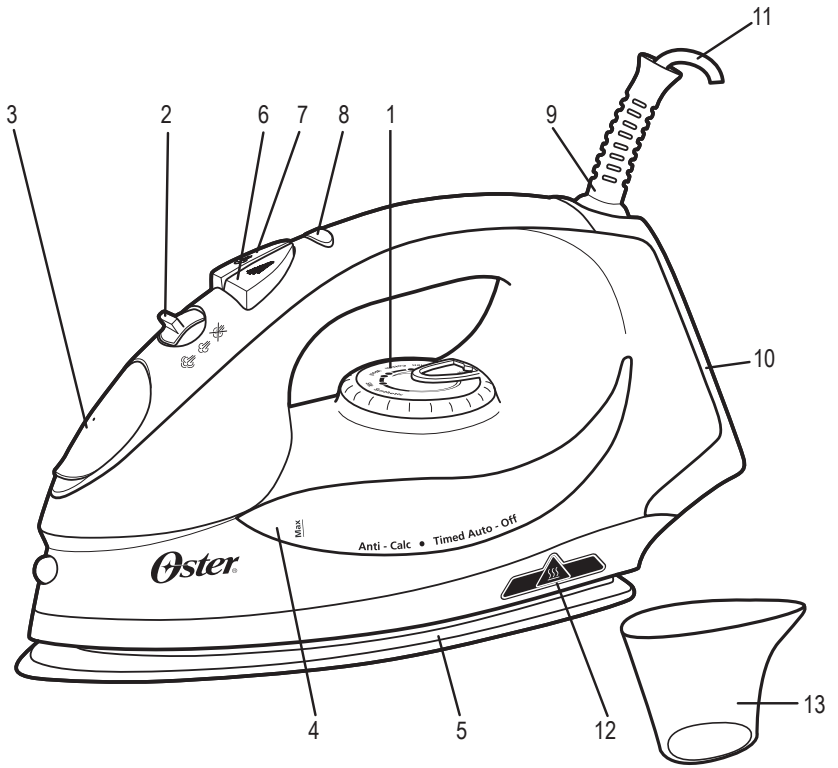

1. Temperature Control Dial
2. Steam Select Switch
3. Water Reservoir Lid
4. See Through Water Window
5. Soleplate - polished aluminum on model 5802, non-stick finish on models 5803, 5813, 5804, 5805, 5806 & 5807
6. Spray Mist Button (models 5804, 5805, 5806 & 5807 only)
7. Shot of Steam Button (model 5805, 5806 & 5807 only)/ Dual Shot of Steam Button (models 5806 & 5807 only)
8. Indicator Light
9. 180° Swivel Cord
10. Wide Heel Rest
11. Power Cord
12. Safe Storage Indicator
13. Water Cup

Before First Use

- When using the Iron for the first time, test it on a piece of old cloth to be sure that the Soleplate and the Water Reservoir are clean.
- It is possible that the Iron will discharge some smoke or give off a slight odor during its first usage. This is due to the initial heating of the materials used. This is completely normal and will stop shortly afterwards.
- When not ironing, always have the Steam Select Switch turned to the closed position ⛇.

Instructions For Use

USING THE STEAM IRON

- Set the Steam Iron in an upright position and insert the plug into the wall electrical outlet.
- Select the desired temperature on the Temperature Control Dial.
- The Indicator Light will go on and once the selected temperature is reached, the light will go off and you can begin to Iron. The Indicator Light will be on every time the Iron is heating. Once it reaches the temperature setting, the Indicator Light will turn off. The Light will turn on and off from time to time while you are ironing since the thermostat automatically maintains the Soleplate at the same temperature.
- The Large Soleplate increases ironing efficiency while the non-stick finish included on models 5803, 5813, 5804, 5805, 5806 & 5807 makes gliding across fabrics even smoother.
- Another important feature of your Steam Iron is the 180º Swivel Cord, which prevents tangling and allows for easy use by both right and left handed people.

CHOOSING THE RIGHT WATER

- This Steam Iron may be used with normal tap water. However, if the water of the region in which you live is especially hard, it is recommended to use distilled water to prolong the life of your Iron.
- Do not use water that has been desalinated with chemicals.

Filling With Water

- Turn off the Iron and disconnect the plug from the electrical wall outlet before filling the Iron with water.
- Turn the Steam Select Switch to the closed position .
- Set the Iron in the position indicated below (figure 2) and fill it with water, no higher than the Max fill level shown on the See Through Water Window.

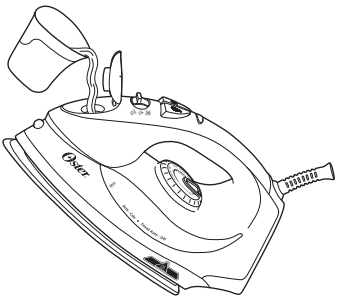

(figure 2)

Dry Ironing

- Insert the plug in the electrical wall socket.
- Make sure that the Steam Select Switch is in the closed position .
- Select the desired temperature on the Temperature Control Dial.
- After the Indicator Light goes off, you may start to iron.

Steam Ironing

- Steam ironing is only possible at high temperatures ("●●", "●●●"), as indicated on the Temperature Control Dial.
- Be sure that there is enough water in the Reservoir.
- Set the iron in an upright position.
- Plug the steam Iron into the wall electrical outlet.
- Turn the Temperature Control Dial to the desired position within the range of temperatures included in the steam area of the dial.

- Wait until the Indicator Light has turned off after lighting up.
- Set the Steam Select Switch to the desired steam level position (figure 3). You are now ready to start steam ironing. The steam will be released evenly through vents located in the soleplate for easier ironing.

(figure 3)

Spray Mist

(Models 5804, 5805, 5806 & 5807 Only)

- The Spray Mist feature is a powerful water spray mist that dampens the fabric to help remove wrinkles from heavy fabrics and to set creases.
- Press the Spray Mist button firmly to start the spray.

Dual Shot of Steam

This feature allows you to use shot of steam while ironing horizontally or vertically, as the next two sections describe.

Shot of Steam

(Models 5805, 5806 & 5807 Only)

- The Shot of Steam feature provides an extra burst of steam for deep penetration of stubborn wrinkles. The Shot of Steam feature can be used with dry or steam ironing provided it has at least a ¼ tank of water and the Temperature Control Dial is set within the steam band.
- Allow the iron to heat for approximately two minutes. Make sure that the Steam Select Switch is in the off position for optimal performance.
- Press the Shot of Steam Button several times to prime the pump.
- Press the Shot of Steam Button another three to four times in order to clean the unit.
- The Shot of Steam feature is now ready for use. The Shot of Steam feature can be used continuously with just a short pause between shots. The Shot of Steam feature is most effective with the Iron held in a horizontal position just above the fabric being ironed.
- If the Water Reservoir runs dry, unplug the Iron and refill with water. The Iron may be filled with water while it is hot. Note: It may be necessary to re-prime the pump before using the Shot of Steam feature again.

Vertical Shot of Steam

(Models 5806 & 5807 Only)

The vertical shot steam feature allows your iron to function as a garment steamer.

Tip: When using the vertical shot of steam on clothing, hang the clothing on a clothes hanger for best results. Hanging curtains and drapes may also be steamed.

How to use Vertical Steam:

1. Allow iron to warm up (2 minutes). Make sure that the Steam Select Switch is in the off position for optimal performance.
2. Hold the iron in a vertical position, with the iron close to but not touching the fabric you want to steam.
3. With your other hand, pull the fabric tight.
4. Press the Shot of Steam button in approximately 3-second intervals as you move the iron across the wrinkled area.

WARNING: To prevent the risk of burns, keep your hand away from the area being steamed.

WARNING: DO NOT steam garments while wearing them; this may result in injuries.

Ironing Temperature

- Check the ironing instructions on the label of the item that you wish to iron. Check the temperature settings table for further instructions.
- Should the specific ironing instructions not appear on the label, follow instructions on the temperature settings table. This table is only valid for the fabrics indicated and does not apply to special textiles with a gloss finish, etc. Textiles with special coatings (such as gloss, relief wrinkles, etc.) are best ironed at very low temperatures. If the textile consists of several different types of fibers, always select the lowest temperature, i.e. the temperature recommended for the most delicate fiber in the composition (for example, if the composition consists of 60% polyester and 40% cotton, you should iron at the temperature indicated for polyester).

Setting The Temperature

- Set the Iron in an upright position.
- Connect the Iron to an electrical wall socket.
- Set the Temperature Control Dial (figure 4) to the correct ironing temperature as indicated on the label or the temperature settings table.

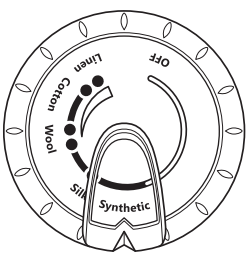

(figure 4)

Temperature Settings Table

Temperature Control Dial			Kind of Textile	Fiber Material
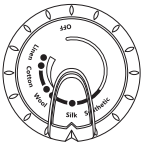	●	DRY	synthetic synthetic synthetic	Acrylic, modacryl polypropylene, polyurethane acetate, triacetate metalized, cupro, polyamide (nylon), polyester
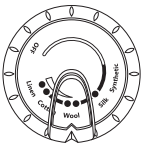	●●	STEAM	silk wool cotton	silk wool cotton
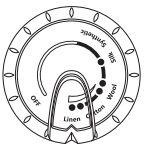	●●●		linen	linen
	on the label means: This article cannot be ironed (e.g. chlorofiber, elastodiene)			

Non-Stick Finish

(Models 5803, 5813, 5804, 5805, 5806 & 5807 Only)

- The non-stick coating prevents fabrics and starch residue from sticking to the Soleplate.
- Avoid all contact of the Soleplate with metal objects.

Note: Scratches in the non-stick Soleplate do not affect the performance of the Iron.

Anti-Calc

The anti-calc feature helps prevent the build up of mineral deposits in your iron. This prolongs its life and improves the iron's performance.

Timed Auto Shut-Off

(Model 5807 Only)

When the iron is plugged in and turned on, the power indicator will light steadily, indicating there is power to the iron. Once the selected temperature is reached, the light will go off and you can begin to Iron.

A 45-minute timer will start once the unit has been plugged in. After 45 minutes, the iron will beep 6 times indicating it will automatically shut-off.

To reset the iron:

Unplug the iron and then put it back into the wall outlet. This will restart the timer for the auto shut-off feature.

WARNING: The timed auto shut-off is a safety feature, not a recommended means for turning your iron off. See the "Storing the Iron" section for information on turning off your iron and storing it safely between uses.

Maintenance and Cleaning

- Before cleaning, always turn OFF iron, disconnect cord from the electrical wall socket and allow to completely cool.

SOLEPLATE

- Residue on the Soleplate can be wiped off with a cloth soaked in a solution of water and vinegar.
- Do not use scouring pads, abrasives or chemical cleaning solvents as they may damage the finish.

HOUSING

- The housing can be cleaned with a moist cloth and then wiped dry.

Other than the recommended cleaning, no further user maintenance should be necessary. If for any reason your Steam Iron should require repairs, do not try to fix it yourself. Send it to an Oster® Authorized Service Center.

Storing the Iron

- Your Oster® Steam Iron includes a Safe Storage Indicator which changes from red to black when the iron is ready for safe storage.
- Turn off the iron and disconnect the plug from the electrical wall socket.
- Set the Iron in an upright position and let it cool down completely.
- Set the Steam Select Switch to the closed position.
- Empty out all the water remaining in the Water Reservoir by opening the Water Reservoir Lid and inverting the Iron over the sink.
- The Power Cord can be wound around the Heel Rest for easier and tidy storing once the unit has cooled down. The Iron should always be stored in an upright position.

WARRANTY

Sunbeam Products, Inc doing business as Jarden Consumer Solutions, its affiliates and subsidiaries (hereinafter collectively referred to as “SPI”) warrant that, for a period of two (2) years from the date of purchase, this product will be free from defects in material and workmanship (the “Warranty”). Please preserve the Warranty Card and Cash Memo duly stamped and signed by the dealer, as this will be required for any claims under this Warranty.

- The rights and benefits under this Warranty are additional to your statutory rights, which are not affected by this Warranty.
- During the period Warranty, SPI at its choice will repair or replace this product or any component of the product found to be defective free of cost through (the Dealer from whom the product was purchased or through the service center listed in card-business people to confirm), provided that:
  - SPI is promptly informed of the defect.
  - The product has not been altered in any way or subjected to misuse or repair by the person other than a person authorized by SPI.
- No rights are given under the Warranty to a person acquiring the product second hand.
- Any repaired or replaced product will be warranted on these terms for the remaining portion of the Warranty in the country where the product was purchased.
- Liability for consequential loss or damage is neither accepted nor is it implied.
- The following are not covered under SPI’s Warranty:
  a. If product was used in any manner other than the intended use.
  b. If product has not been used according to the instruction manual/User’s Manual, included with the product.
  c. If defects are caused by improper or reckless use.
  d. If product was altered or repaired by anyone other than those authorized by the national manufacturer, importer or respective merchant.
  e. Use of incorrect current or voltage or faulty electric power supply.
  f. Normal wearing and tearing of parts and accessories resulting from regular use.
  g. Damages resulting from transportation, accidents, mishandling or negligence on the part of the customer.
  h. The following part/components:
     • Glass container
     • Light bulb
     • Accessories
  i. Industrial or commercial use of product.

Waste electrical products should not be disposed of with household waste.
Please recycle where facilities exist.

AUTHORIZED SERVICE CENTERS

Region	Location	Customer Service Center Address	Area / Towns Covered
WEST	Mumbai	**S P Services** Shop No. 10, Abdul Sattar Compound Near Railway Station Elphinston Road (West) Mumbai – 400013 Maharashtra, India Phone # (022) 24326726, 24312623	Mumbai, Navi Mumbai & Thane
	Pune	**Shree Ganraj Services** Shop No. 8, Shri Ganesh Gayatri Complex, 291 Sombar Peth, Pune - 411011 Maharashtra, India Phone # (020) 32949014	Pune, Pimpri & Chinchwad
	Goa	**Jolly Enterprises** Shop # G-2, 78/A Nuvem Enclave Along NH-17 Highway, Belloy Nuvem Salcete - 403 604 Goa, India Phone # (0832) 2791800	Goa
	Ahmedabad	**Shree Sainath Associates** Basement - 2, Shaan Building Opp. Town Hall, Behind Sakar- 4 Ellisbridge Ahmedabad – 380006 Gujarat, India Phone # (079) 26581635	Ahmedabad, Vodadara, Nadiad & Anand
	Surat	**Smart Care** A-5, Taj Chambers, 3rd Floor Opp. Congress Bhavan, Near Silk House Market Sona Faliya, Chowk Bazar Surat - 395003 Gujarat, India Phone # (0261) 6509394	Surat, Bharuch, Navsari, Bardoli, Valsad, Vapi, Silvasa
SOUTH	Chennai	**G C Services** Old No. 12, New No. 37 1st Floor, Sattanna Naicken Street Nehru Timber Market, Choolai Chennai - 600 112 Tamil Nadu, India Phone # (044) 26690084 / 42822868	Chennai
	Hyderabad	**Bright Engg Works** # 7-4-195/1&2, Geeta nagar Ferozguda, Near BBR Hospital Beside Bharath Lodge, Balanagar Secunderabad – 500011 Andhra Pradesh, India Phone # (040) 23774648 / 23771842	Hyderabad & Secunderabad
	Bangalore	**Electrocare Services** No. 151/1, Second Main 7th Cross, Chamrajpet, Bangalore – 560018 Karnataka, India Phone # (080) 65993911, 26605762	Bangalore
NORTH	Delhi	**S. T. Services** M-131, 1st Floor Guru Harkishan Nagar Paschim Vihar New Delhi - 110041 India Phone # (011) 32958438 / 45586987	North, West & South Delhi
	Delhi	**Pant Sales and Service** A-11, Pandav Nagar Near Mother Dairy Factory Delhi - 110092 India Phone # (011) 22486687	East & Central Delhi, Noida, Faridabad & Ghaziabad
	Gurgaon	**Avon Services** House No. 902/3, Gali No. 2 Rajeev Nagar (East) Gurgaon – 122001 Haryana, India Phone # 9212406014 / 9810813256	Gurgaon
	Chandigarh	**Sai Sales Corporation** SCO 68-70, Basement Chamber No. 66 Sector 17-A, Chandigarh Chandigarh, India Phone # (0172) 5078028 / 3064028	Chandigarh, Panchkula, Mohali, Zirakpur & Nayagaon
	Ludhiana	Creations Enterprise D-3, 2nd Floor, Girja Ghar Market, Books Market Chowk, Chaura Bazar Ludhiana - 141 008 Punjab, India Phone # (0161) 2720523 / 2740523	Ludhiana, Jalandhar, Chandigarh & Jammu
EAST	Kolkata	**Europa Sales and Service** 56 - C /1 Kankulia Road Golpark, Kolkata – 700029 West Bengal, India Phone # (033) 32548558	Kolkata & Suburbs

महत्वपूर्ण सुरक्षा क्दम

बिजली के उपकरण उपयोग करते समय , कृपया सुरक्षा निर्देशों का हमेशा पालन करना चाहिए , जिसमें निम्नलिखित शामिल हैं.

इस आयरन का उपयोग करने से पहले सभी निर्देशों को ध्यान से पढ़े

1. ऑउटलेट में प्लग लगाते और निकालते समय आयरन हमेशा "ऑफ़" होना चाहिए.प्लग को ऑउटलेट निकालते समय कभी भी खीचें नहीं; उसे आराम से पक्ड़ कर निकाले.
2. स्टीम आयरन का प्लग लगाने से पहले ये सुनिश्चित कर ले कि आपके आउटलेट का वोल्ट्ज उपकरण की रेटिंग टेबल में निर्देशित वोल्टेज के अनुकूल है.इसे केवल दीवार में ही लगाएं.
3. बिजली के झट्के से बचने के लिए बिजली के तार ,प्लग या स्टीम आयरन को जल या अन्य तरल पदार्थो में न डुबोएं.
4. कभी भी गीले हाथों से स्टीम आयरन का उपयोग न करें.
5. बच्चो द्वारा इसका उपयोग नहीं किया जाना चाहिए .
6. कभी भी स्टीम आयरन को ऑन स्थिती या आयरनिंग के टॉप पर या फिर जब वो दीवार के पॉवर सॉकेट में लगा हो तो उसे अकेला ना छोड़.
7. जब उपयोग में ना हो तो इसका प्लग निकाल दे.
8. स्टीम आयरन को स्टोर करने से पहले इसे पूरी तरह ठंड़ा होने दे और इसे खड़ी स्थिती में रखे. रखने से पहले इसके पॉवर कॉर्ड को हील रेस्ट पर लपेटे.
9. गर्म भागों,पानी या भाप को छूने से आप जल सक्ते हैं.अगर आपने स्टीम आयरन को सीधा खड़ा रखा है तो सावधान रहे,क्योकिं अन्दर अभी भी गर्म पानी हो सक्ता है.
10. आयरन को क्षतिग्रस्त तार होने पर या फिर टूटा होने पर या फिर लीकेज होने पर ना प्रयोग करें.बिजली के झट्को से बचने के लिए,आयरन को डिसएसेम्बल न करें.इसे अधिकृत ओस्टर सेवा केन्द्र में मरम्मत या परीक्षण के लिए ले जाए.गलत मरम्मत से आयरन का प्रयोग करते समय बिजली का झट्का लग सक्ता है.
11. खुले में इसका उपयोग ना करें
12. पॉवर कॉर्ड को गर्म सतह पर ना छूने दे. ये जल सक्ता है.
13. ये स्टीम आयरन केवल घरेलू उपयोग के लिए निर्मित है.
14. स्टीम आयरन का इसके सही उद्देश्य केलिए ही इस्तेमाल करें.
15. स्टीम आयरन का उपयोग करते समय उसके सामने ही रहे,उसे अकेला ना छोड़े.सावधान रहें.जब भी स्टीम आयरन को अकेला छोड़ना हो तो इसे ऑफ़ कर के यूनिट से इसका प्लग निकाल ले और इसे सीधा खड़ा कर सुरक्षित रखें.
16. केवल प्रशिक्षित और योग्य मिस्त्री से ही आयरन की मरम्मत कराएं.गलत मरम्मत से उपयोगकर्त्ता को कई प्रकार के खतरे हो सक्ते हैं. अपने नज़दीकी अधिकृत ओस्टर™ सर्विस सेंटर में ही आवश्यक मरम्मत के लिए ले जाएं.
17. वॉल सॉकेट से तार निकाल से पहले हमेशा आयरन को ऑफ़ कर दे और पानी भरने , निकालने या सफाई से पहले ठंड़ा करना ना भूलें.
18. जल स्टोर करने की जगह में क्षमता से अधिक पानी न भरें.कभी भी अधिकतम

    जल स्तर को पार न करें.
19. सर्किट्स पर ओवर लोडिंग से बचने के लिए, कभी भी एक ही सर्किट में इसके साथ अन्य उच्च वोल्ट्ज वाला उपकरण ना लगाएं.
20. आयरन को हमेशा सपाट और ना हिलने–डुलने वाली जगह पर रखना और प्रयोग करना चाहिए .
21. अगर एक्सटेंसन कॉर्ड वाकई में जरूरी है तो ,आयरन के लिए आवश्यक समान या उससे अधिक एम्परेज का तार उपयोग करना चाहिए.कम एम्परेज का तार उपयोग करने से स्टीम आयरन ओवरहीट(अधिक गर्म) हो सक्ता है.तार की देखरेख भी ठीक से करनी चाहिए,इसे खींचा या घसीटा नहीं जाना चाहिए.

22. ये उपकरण कम शारीरिक या मानसिक क्षमताओं वाले लोगों (जिसमें बच्चे शामिल हैं) या जिन्हें कम अनुभव या ज्ञान है उनके उपयोग के लिए नहीं बनाया गया हैं.जब तक उन्हें उनकी सुरक्षा के लिए जिम्मेदार व्यक्ति द्वारा इस उपकरण का उपयोग करने के लिए उचित निर्देश और मार्गदर्शन न दिए गए हो, वो इसका उपयोग ना करें.अभिभावकों को ये ध्यान रखना चाहिए कि बच्चे उपकरण से ना खेले.

23. जब बच्चे या कम शारीरिक क्षमता वाले लोग इसका उपयोग कर रहे हो तब उस समय अच्छी तरह निरीक्षण की आवश्यक्ता होती है.

इन निर्देशों को सुरक्षित करें

स्टीम आयरन के गलत या अनुचित तरीके से किए गए इस्तेमाल के कारण होने वाले , किसी भी प्रकार के नुकसान के लिए निर्माता जिम्मेदार नहीं होगा.

उपकरण का विवरण

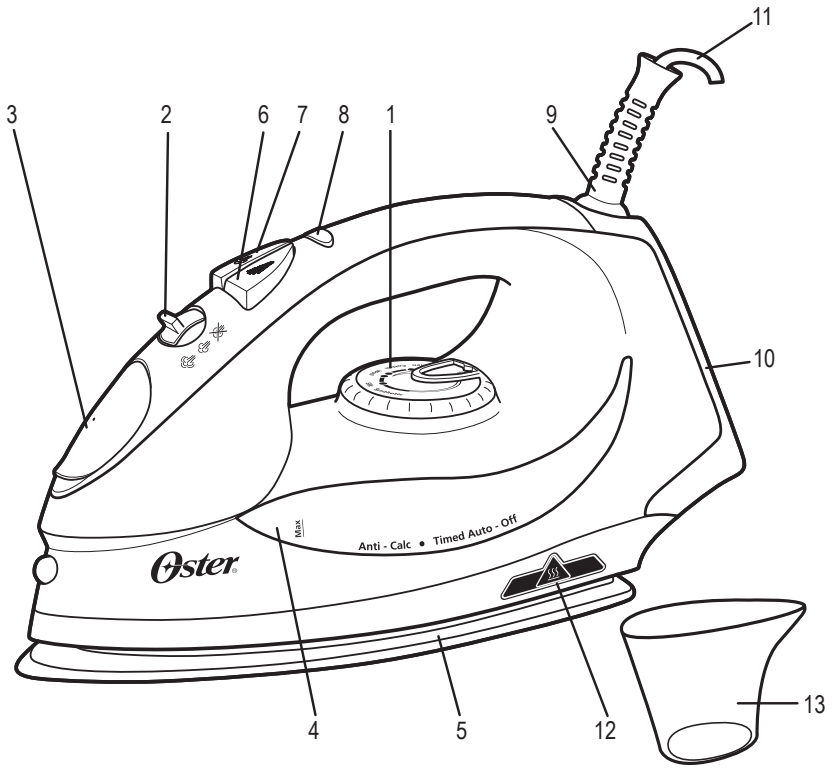

1. तापमान नियंत्रक डायल
2. भाप चुनने का डायल
3. पानी भरने वाली पारदर्शी खिड़की
4. पानी देखनें वाली पारदर्शी खिड़की
5. **सोलप्लेट** – पॉलिश अलयुमीनियम के वल मॉडल 5802, नॉन–स्टिक फिनिश (के वल मॉडल्स 5803,5804,5805,5806 और 5807)
6. पानी की छींटे छोड़नेवाला बटन (के वल मॉडल्स 5804,5805,5806 और 5807)
7. भाप छोड़नें वाला बटन (के वल मॉडल्स 5805,5806 और 5807) / दोहरी ताक़त वाला भाप छोड़नें का बटन (के वल मॉडल्स 5806 और 5807)
8. सूचक रोशनी
9. 180° सरकने वाली तार
10. रखने का बड़ा तला
11. बिजली का तार
12. सुरक्षा सूचक रोशनी
13. वाटर कप

पहली बार उपयोग से पहले

- आयरन का पहली बार उपयोग करते समय , इसे पुराने कपड़े के टुकड़े पर टेस्ट करें और ये सुनिश्चित करें कि सोलप्लेट और जल स्टेर करने की जगह साफ़ है.
- पहली बार उपयोग करते समय आपको आयरन हल्का धुआं निकलता दिख सकता है.ये निर्माण सामग्री के आरम्भिक उपयोग के कारण होती है. ये धुआं और गन्ध आम बात है और केवल कुछ ही समय तक रहती है.
- जब आयरन न कर रहे हो तब हमेशा स्टीम चयन स्विच को बंद रखें.

उपयोग के लिए निर्देश

स्टीम आयरन की उपयोग विधि

- स्टीम आयरन को सीधा रखें और प्लग को दीवार के बिजली के साकेट में लगाएं.
- तापमान नियंत्रक डायल पर अपना मनचाहा तापमान चुनिए.
- इंडिकेटर लाइट जल जाएगी और जब चुना गया तापमान हो जाएगा तब वही लाइट बन्द हो जाएगी और तब आप आयरन करना शुरु कर सकते हैं.ये इंडिकेटर लाइट हर बार जलेगी जब आयरन गर्म होना शुरू होगा. और हर बार ये तापमान पूरा होने पर अपने आप बंद हो जाएगी. ये लाइट आयरन करते समय अपने आप जलती–बुझती रहेगी,क्योंकि थर्मोसेट सोलप्लेट का तापमान नियंत्रित करता रहता है.
- बड़ी सोलप्लेट से आयरनिग की क्षमता बढ़ती है. नॉनस्टिक फिनिश वाले मॉडल्स 5803, 5813, 5804, 5805, 5806 और 5807 कपड़ पर आसानी से चलते हैं.
- आपके आयरन की एक अन्य महत्वपूर्ण विशेषता इसकी 180 कस्वीवेल कॉर्ड है. जो इसे उलझने से बचाता है और इसे दाये और बाये दोनो हाथों से उपयोग करने वाले लोगों को सुविधा प्रदान करता है.

उचित जल का चयन

- स्टीम आयरन में आप साधारण नल के पानी का उपयोग कर सकते हैं. अगर आप खारे पानी वाले इलाके में रहते हैं,तब आपको अपने आयरन को लम्बे समय तक ठीक रखने के लिए डिस्टिल्ड जल का उपयोग करना चाहिए.
- रसायनिक रूप से डिस्टिल्ड जल का उपयोग ना करें.

जल भरने की विधि

- जल भरने से पहले आयरन को बन्द करें और प्लग को दीवार के बिजली के साकेट से निकाल ले.
- स्टीम चयन स्विच को ऑफ़ कर दें.
- नीचे दर्शाए गए तरीके(चित्र 2) से आयरन को सेट करें और जल भर दे. पारदर्शी जल सूजक में बने उच्चतम स्तर से ज़्यादा न भरें (चित्र 2)

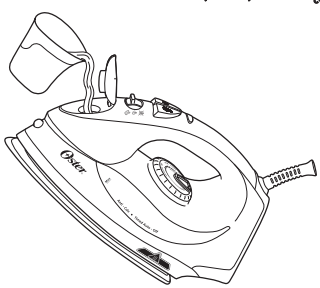

(चित्र 2)

ड्राय(सूखी) आयरनिंग

- प्लग को दीवार के विद्युत ऑउटलेट पर लगाए.
- सुनिश्चित करें कि स्टीम चयन स्विच ऑफ़ है
- तापमान नियंत्रक डायल पर अपना मनचाहा तापमान चुनिए.
- इंडिकेटर लाइट बन्द होने के बाद,आप आयरन शुरू कर सक्ते है

स्टीम आयरनिंग

- स्टीम आयरनिंग उच्च तापमान पर ही संभव है (‘“●●”, “●●●”)जैसा तापमान नियंत्रक डायल पर दिखाया गया है.
- जल स्टोर करने के स्थान में आवश्यक मात्रा को सुनिश्चित करें.
- आयरन को सीधी खड़ी अवस्था में सेट करें.
- प्लग को दीवार के विद्युत ऑउटलेट पर लगाए.
- तापमान नियंत्रक डायल पर दी गई तापमान रेंज मे दिखाए गए स्टीम क्षेत्र से अपना मनचाहा तापमान चुनिए.
- इंडिकेटर लाइट जलने के बाद उसके बन्द होने तक इंतज़ार कीजिए.
- स्टीम चयन स्विच को मनचाही स्थिति में सेट करें (चित्र 3). अब आप स्टीम आयरनिंग कर सक्ते है.अब स्टीम आराम से सोलप्लेट के छेदो से आसान आयरनिंग के लिए निक्लेगी. (चित्र 3)

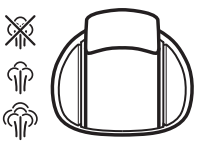

(चित्र 3)

स्प्रे मिस्ट

(केवल 5804, 5805, 5806 और 5807 मॉडल्स में)

- स्स्प्रे मिस्ट सुविधा एक शक्तिशाली जल की फुहार छोड़ता है जिससे भारी और ज़िद्दी कपड़ों से सिलवटें निकालने और क्रीज़ बनाने में सहायता मिलती है.
- स्प्रे मिस्ट बटन को कस कर दबाए और स्प्रे करना शुरू करें.

स्टीम की दोहरी ताकत

इस सुविधा से आप स्टीम का शॉट (फुहार) बेड़ी(क्षैतिज) या खड़ी(अनुलंब) तरह से आयरन करते समय मार सक्ते हैं,जैसा अगले तो चरणों मे बताया गया है.

स्टीम का शॉट

(केवल 5805 5806 और 5807 मॉडल्स में)

- स्टीम शॉट सुविधा से आपको जिद्दी सिलवटो को मिटाने वाली जबरदस्त फुहार मिलती है.ये सुविधा ड्राय या स्टीम दोनो प्रकार की आयरनिंग के साथ प्रयिग की जा सक्ती है. इसमें एकचौथाई ¼ टैंकपानी और तापमान नियंत्रकडायल को स्टीम बैंड के अन्दर सेट करना होता है.
- आयरन को गर्म होने में लगभग दो मिनट लगते हैं. ये सुनिश्चित कर लीजिए की स्टीम चयन स्विच ऑफ़ है जिससे वो अपनी पूरी कार्यक्षमता के लिए तैयार हो जाऐ.
- स्टीम शॉट बटन को बार–बार दबाकर पम्प को चलाएं.
- स्टीम शॉट बटन को तीन से चार बार दबाकर यूनिट को साफ करें.
- स्टीम शॉट सुविधा अब उपयोग के लिए तैयार है. स्टीम शॉट सुविधा को लगातार , शॉट्स के बीच छोटे–छोटे विराम देकर उपयोग कर सक्ते है.ये स्टीम शॉट सुविधा कपड़ के उभर क्षैतिज अवस्था में आयरन करने पर सबसे अधिकप्रभावशाली है.
- अगर जल स्टोर करने की जगह खाली हो जाए तो , आयरन का प्लग निकाले और दोबारा जल भरें.गर्म आयरन में भी पानी भरा जा सक्ता है.

नोट : पम्प को स्टीम शॉट सुविधा के दोबारा उपयोग से पहले री–प्राइम करना जरूरी है.

वर्टिकल(अनुलम्ब)स्टीम शॉट

(केवल 5806 और 5807 मॉडल्स में)

वर्टिकल (अनुलम्ब)स्टीम शॉट विशेषता आपके आयरन परिधान स्टीमर की तरह काम करने की सुविधा देता है.

टिप : कपड़े पर इस सुविधा का उपयोग करते समय, बेहतरीन परिणामों के लिए कपड़े हैंगर पर लटका दें. आप लटकते परदों पर भी स्टीम आयरन कर सक्ते हैं.

वर्टिकल (अनुलम्ब)स्टीम शॉट का उपयोग कैसे करें.

1. आयरन को दो मिनट तकगर्म होने दीजिए और बेहतरीन परिणाम के लिए सुनिश्चित करें किस्टीम चयन स्विच ऑफ़ है.
2. आयरन को खड़ी/ वर्टिकल (अनुलम्ब) स्थिति में पकड़,और आयरन किए जाने वाले कपड़ से थोड़ी दूरी पर रखे.
3. दूसरे हाथ से कपड़े को जोर से खीचें.
4. सिलवटो पर आयरन को चलाते हुए स्टीम शॉट बटन को लगभग 3 सेकेंड के अंतराल में दबाते रहे.

चेतावनी: जलने से बचने के लिए,अपने हाथ को स्टीम्ड किये जा रहे भाग से दूर रखें.

चेतावनी: पहने हुए कपड़े को स्टीम न करें . आप जल सक्ते हैं.

आयरनिंग तापमान

- लेबल पर दिए गए अपनी मनचाही सामग्री के आयरनिंग निर्देशो को देखे.अन्य निर्देशो के लिए तापमान सेटिंग्स टेबल को देखे.
- ये खास निर्देश लेबल पर नहीं दर्शाए गए हैं, तापमान सेटिंग्स टेबल के निर्देशों का पालन करें.ये टेबल केवल सुझाए गए कपड़ों पर लागू है और ये खास टैक्सटाइल ग्लॉस चमकआदि पर मान्य नहीं है. खास कोटिंग के साथ टैक्सटाइल्स (जैसे ग्लॉस, रिलीफ रिंकिल्स आदि)कम तापमान पर अच्छी तरह आयरन करे जा सक्ते हैं. यदि कपड़े में विभिन्न प्रकार के फाइबर्स(रेशो) का इस्तेमाल किया गया है, तो हमेशा न्यूनतम तापमान को चुनें.जैसे सबसे कोमल फाइबर के लिए कम्पोजीशन में तापमान सुझाया गया है (उदा. – अगर कम्पोजीशन में 60% पॉलिएस्टर और 40% सूत/कॉटन है , तब आपको पॉलिएस्टर के हिसाब से तापमान पर आयरन करना चाहिए)

तापमान सेटिंग

- **सीधी स्थिति में आयरन को सेट करें.**
- **आयरन को दीवार के बिजली के सॉकेट में लगाएं.**
- **तापमान नियंत्रक डायल (चित्र 4) को सही आयर्निंग तापमान पर सेट करें जैसा तापमान सेटिंग्स टेबल में सुझाया गया है**

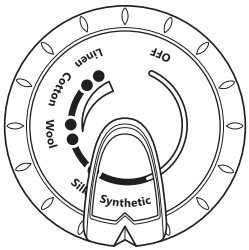

(चित्र 4)

तापमान सेटिंग्स टेबल

तापमान नियंत्रक डायल			कपड़े का प्रकार	रेशे वाले कपड़े
	●	सूखी	सिंथेटिक सिंथेटिक सिंथेटिक	एक्रेलिक, मोडाक्रिल पॉलिप्रोपीलीन पॉलीयूरेथेन एसेटेट, ट्रायसेटेट मैटेलाइज़्ड, कयूप्रो पॉलीआमाइड(नायलॉन) पॉलियस्टर
	●●	भाप	सिल्क वूल कॉटन	सिल्क वूल कॉटन
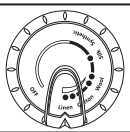	●●●		लिनेन	लिनेन
	सूचक पत्र का मतलब : यह चीज इस्तरी नहीं हो सकती (उधारण : क्लोरोफाईबर रलैस्टोडीन)			

नॉन–स्टिक फिनिश

(केवल 5803, 5813, 5804, 5805, 5806 और 5807 मॉडल्स में)

- नॉन स्टिक कोटिंग फाइबर और स्टार्च अवशेषों को सोलप्लेट से चिपकने से बचाती है.
- सभी प्रकार की धातुओ के सम्पर्क से सोलप्लेट को बचाएं.

नोट : नॉन–स्टिक सोलप्लेट में खरोचों से इसकी क्षमता में असर नहीं पड़ता है.

एंटी– कैल्क

एंटी – कैल्क सुविधा आयरन में मिनरल कणों को नही जमने देती है. इससे आपके आयरन का टिकाऊपन और कार्यक्षमता बढ़ती है.

टाइम्ड आटो शट–ऑफ/समयबद्ध स्वत: शट–ऑफ

(केवल 5807 मॉडल में)

जब आयरन का प्लग लगाया जाएगा तो वो, ऑन हो जाएगा और पॉवर इंडिकेटर लाइट जल जाएगी और तापमान पूरा होने पर अपने आप बंद हो जाएगी.और आप आयरन शुरू करने के लिए तैयार हो जाएगे.

प्लग लगाते ही 45 मिनट टाइमर शुरू हो जाएगा. 45 मिनटों के बाद,आयरन 6 बार बीप से सूचित करने के बाद अपने आप ही बन्द हो जाएगा.

आयरन को रीसेट करने के लिए

आयरन का प्लग निकाले और उसे दोबारा दीवार के आउटलेट में लगाएं. इससे टाइमर आटो शट–ऑफ़ सुविधा के लिए दोबारा शुरू(री–स्टार्ट) हो जाएगा.

चेतावनी: टाइम्ड आटो शट–ऑफ एक सुरक्षा प्रणाली है,इससे अपना आयरन बन्द करने के लिए प्रयोग नहीं करना चाहिए. आयरन बन्द करने और इसके सुरक्षित रखरखाव की जानकारी के लिए ङ्क स्टोरिंग द आयरन ङ्क भाग देखें.

रखरखाव और सफाई

- साफ़ करने से पहले हमेशा आयरन को ऑफ़ करें, उसका तार वॉल सॉकेट से निकाल ले और पूरी तरह ठंडा होने दे.

सोलप्लेट

- सोलप्लेट पर लगी चीज़ो को पानी और वेनेगर से नम कपड़े द्वारा साफ किया जा सकता है .
- घिसने वाले पैड और रसायनिक सफाई के घोलों का उपयोग न करें .इसस फिनिश को नुकसान पहुंच सकता है

हाउसिंग

- हाउसिंग को हल्के नम कपड़े से साफ़ करें और फिर पोंछ कर सुखाएं.
  सुझाए गई सफाई के अलावा , किसी भी अन्य रखरखाव की ज़रूरत नहीं है . अगर आपके स्टीम आयरन की कभी मरम्मत करवानी पड़े तो , इसे खुद ठीक करने की बिल्कुल कोशिश न करें.. इसे ओस्टर™ अधिकृत सर्विस सेंटर में ही मरम्मत के लिए ले जाएं.

आयरन की स्टोरिंग

- आपके ओस्टर स्टीम आयरन में एक सुरक्षित स्टेरेज इंडीकेटर भी है. जब आयरन सेफ़ स्टेरेज के लिए तैयार हो जाता है तो ये लाइट लाल से काली हो जाती है.
- स्टीम आयरन को बन्द करें और बिजली के वॉल–सॉकेट से उसका प्लग निकाल लें.
- स्टीम आयरन को सीधी स्थिति में सेट करे और पूरी तरह ठंडा होने दें.
- स्टीम चयन स्विच को बन्द स्थिति पर सेट कर दें
- वाटर रिजर्वायर ढक्कन को खोल कर जल स्टोर करने की जगह से सारा बचा हुआ पानी निकाल दें.
- ठंडा होने के बाद पॉवर कॉर्ड को हील रेस्ट में लपेटे और आसान तथा झंझट मुक्त स्टोरिंग करें.आयरन को हमेशा सीधी स्थिति में ही रखना चाहिए.

वारंटी

सनबीम प्रोडक्ट्स, इंक जॉर्डन कंस्युमर सॉल्यूशनस, के तौर पर व्यवसाय कर रही है,इस सहयोगी और सहायक संगठन (बाद में सामूहिक तौर पर SPI के रूप में निर्दिष्ट) आश्वासन देते हैं कि, खरीद की तारीख से के दो साल तक, ये उत्पाद निर्माण और सामग्री के दोषों से मुक्त होगा (वारंटी).कृपया वारंटी कार्ड और कैश मेमो, डीलर की मोहर और हस्ताक्षर के साथ सुरक्षित रखे,चूकिं ये वारंटी क्लेम के लिए ज़रूरी होगा.

- इस वारंटी के अधिकार और लाभ आपके कानूनी अधिकारों के अतिरिक्त है, इस वारंटी द्वारा जो प्रभावित नहीं हैं.
- इस वारंटी के दौरान, SPI अपनी इच्छानुसार इस उत्पाद या इसके खराब पुर्जो को निशुल्क बदल या मरम्मत कर सक्ती है. (डीलर जिससे उत्पाद खरीदा गया था या सूची में दिए गये सर्विस-सेंटर्स से) बशर्ते कि
  - SPI द्वारा तुरंत दोष के बारे में बताया है.
  - उत्पाद में किसी भी तरह की छेड़छाड़ ना की हई हो जैसे दुरुपयोग या मरम्मत – SIP द्वारा अधिकृत व्यक्ति के अलावा किसी अन्य द्वारा .
- सैकेंड हैंड उत्पाद के धारक को वारंटी के अन्दर कोई अधिकार नहीं दिए गए हैं.
- कोई भी मरम्मत किया गया या बदला गया उत्पाद वारंटी का बचा भाग उसी देश में पाएगा जिसमें उसे खरीदा गया था.
- परिणामगत हानि या क्षति की देयता ना तो मान्य होगी और न ही लागू होगी.
- SPI वारंटी के अंतर्गत निम्नलिखित कवर चीज़े कवर नहीं होगीं:

  अ. अपने लक्षित उपयोग के अतिरिक्त किसी अन्य उपयोग पर.

  ब. अगर उत्पाद का उपयोग निर्देश/उपयोग मैनुअल में बताएं तरीको के अलावा ,अन्य तरह से किया गया है

  स. अगर दोष अनुचित और गैर ज़िम्मेदार उपयोग से हुआ है.

  द. मरम्मत या छेड़छाड़ राष्ट्रीय निर्माता,इम्पोर्टर या संबंधित व्यापारी द्वारा अधिकृत व्यक्ति के अलावा किसी अन्य द्वारा की गई है.

  ई. अनुचित करंट ,वोल्टेज या गलत बिजली की आपूर्ति का प्रयोग.

  फ. सामान्य प्रयोग के दौरान.होने वाली पुर्जो और एक्सेसिरीज़ के साथ छेड़छाड़.

  ग. ग्राहक द्वारा परिवहन,दुर्घटनावश,लापरवाही या ध्यान न देने दे हुए नुक्सान

  ह. निम्नलिखित भाग/पुर्जे :
     - ग्लास कंटेनर
     - लाइट बल्ब
     - सहायक उपकरण

उत्पाद का औद्योगिक या वाणिज्यिक उपयोग

अपशिष्ट बिजली के उत्पादों को घरेलू कचरे के साथ ना फेकें कृपया जहां सुविधाएं मौजूद हैं वहाँ रीसायक्ल करें.

सर्विस सेंटर

क्षेत्र	षहर	सर्विस सेंटर के नाम	कवर किए गए इलाके
पश्चिम	मुंबई	मेसर्स एस. पी. सर्विसेस षॉप नं. 10, अब्दुल षटर कम्पाउंड, फिटवाला रोड, सतगुरु दर्षन बिल्डिंग के पीछ, रेलवे स्टेषन के पास, एलफिंस्टन रोड पष्चिम मुबई–400013 महाराश्ट्र, भारत फोन नं. : 022–24326726 / 24312623	मुंबई, ठाणे और नवी मुंबई
	पुणे	मेसर्स श्री गणराज सर्विसेस षॉप नं. 8, श्री, गणेष गायत्री कॉम्प्लेक्स, 291, सोमवार पेठ, पुणे–411011 महाराश्ट्रा, भारत फोन नं. : 020–32949014	पुणे, पिंपरी और चिंचवाड
	गोवा	जौली एन्टरप्राइजेस जी–2ए 78 / ए, नुवेम एन्कलेव, एन एच – 17 हाईवे के साथ, बीलौय नुवेम सालसेट–403604 गोवा, भारत फोन नं. : 0832–2791800	गोवा
	अहमदाबाद	मेसर्स श्री सांईनाथ एसोसिएट्स बेसमेंट–2, सान बिल्डिंग के विपरीत, टाउन हाल के पीछे, सकर–4 एलिसब्रिज अहमदाबाद–380006 गुजरात, भारत फोन नं. : 079–26581635	अहमदाबाद, वोडादरा, नादिआद और आनंद
	सूरत	स्मार्ट केयर ए–5, ताज चैम्बर, तीसरा तल कांग्रेस भवन के पीछे, सिल्क हाउस मार्केट सोना फालिया चौक बाजार के पास सूरत–395003 गुजरात, भारत फोन नं. : 0261–6509394	सूरत, भारूच, नवसारी, बारदोली, वलसाद, वापी और सिल्वासा
दक्षिण	चेन्नई	मेसर्स जीसी सर्विसेज` पुरानी संख्या. 12, नई संख्या 37 पहली मंजिल, सन्ताना नायक मार्ग नेहरू टिम्बर मार्केट चोलई, चेन्नई–600012 तमिलनाडू, भारत फोन नं. : 044–26690084 / 42822868	चेन्नई
	हैदराबाद	ब्राइट इंजी. वर्क्स 7.4.195 / 1 और 2, गीता नगर, फिरोजगुड, बीबीआर अस्पताल के पास भारत लॉज के पास, बालानगर, सिकन्दराबाद–500011 आंध्र प्रदेष, भारत फोन नं. : 040–23774648 / 23771842	हैदराबाद और सिकन्दराबाद
	बंगलुरू	मेसर्स इलेक्ट्रोकेयर सर्विसेज नं. 151 / 1, सेकन्ड मेन 7 यां क्रॉस, चामराजपेठ, बंगलुरू–560018 कर्नाटका, भारत फोन नं. : 080–26605762 / 65993911	बंगलुरू
उत्तर	दिल्ली	मेसर्स एस. टी. सर्विस पॉइंट म–131, पहली मंजील, गुरू हरकृश्ण नगर, पष्चिम विहार नई दिल्ली–110041 भारत फोन नं. : 011–45586987 / 32958438	उत्तर, पष्चिम और दक्षिण, दिल्ली
	दिल्ली	मेसर्स पंत सेल एण्ड सर्विसेज़ ए–11, पांडव नगर, मदर डेरी फैक्ट्री के पास दिल्ली–110092 भारत फोन नं. : 011–22486687	फरिदाबाद, नोएडा, गाजियाबाद, पूर्व और केन्द्रीय दिल्ली
	गुड़गॉव	एवोन सर्विसेस मकान नं. 902 / 3, गली नं. 2 राजीव नगर वेस्ट गुड़गॉव–122001 हरियाणा, भारत फोन नं. : 9212406014 / 9810813256	गुड़गॉव
	चंडीगढ़	मेसर्स साईं सेल्स कोर्पोरेषन एस सी ओ 68–70, बेसमेंट चैम्बर नं: 66 सेक्टर 17–ए, चंडीगढ़ चंडीगढ, भारत फोन न. : 0172–5078028 / 3064028	चंडीगढ़, पंचकुला, मोहाली, जिराकपुर और नयागॉव
	लुधियाना	मेसर्स क्रीएषंस एंटरपाइजेस डी–3, दूसरी मज़िल, गिरीजा घर मार्केट, बुक्स मार्केट चौक चौरा बाजार लुधियाना–141008 फोन न. : 0161–2720523 / 2740523	लुधियाना, जलंधर, चंडीगढ़ और जम्मू
पूर्व	कोलकाता	मेसर्स यूरोपा सेल एण्ड सर्विसेस 56 सी / 1 कनकुलिया रोड़ गोल पार्क, कोलकाता–700029 पष्चिम बंगाल, भारत फोन नं. : 033–32548558	कोलकाता और सुबर्ब

WARRANTY CARD

वारंटी कार्ड

© 2013 Sunbeam Products, Inc. doing business as Jarden Consumer Solutions.
All rights reserved. Manufactured by Sunbeam Products, Inc. doing business as Jarden Consumer Solutions,
2381 Executive Center Drive, Boca Raton, Florida 33431 U.S.A.
Distributed by Jarden Consumer Solutions of India Private Limited, Unit B-204,
Universal Business Park, Off Saki Vihar Road, Chandivali Farm Road, Andheri (E)
Mumbai 400 072, India.

1-800-102-6300

© 2013 सनबीम प्रोडक्ट्स, इंक जॉर्डन कंज़्युमर सल्युशन के रूप में व्यापार करते हैं।
सर्वाधिकार सुरक्षित। सनबीम प्रोडक्ट्स इंक द्वारा निर्मित जो जॉर्डन कंज़्युमर सल्युशन के रूप में व्यापार करते
हैं, 2381 एक्ज़िक्यूटिव सेंटर ड्राइव, बोका रेटन, फ्लोरिडा 33431, यूएसए
जॉर्डन कंज़्युमर सल्युशन ऑफ इंडिया प्रा. लि., यूनिट बी–204, यूनिवर्सल बिजनेस पार्क, साकी विहार रोड के
सामने, चांदीवली फार्म रोड, अंधेरी (ई) मुम्बई 400072, भारत द्वारा वितरित

1-800-102-6300

मॉडल नं. _____

खरीदने की तारीख _____

डीलर की मुहर _____

Printed in India
भारत **में प्रकाशित**

P.N. 141260
CBA -080612